












# POWER BANK CART

INSTALLATION INSTRUCTIONS


## PACKING LIST:

	(1) Cart Frame		(4) M6 Screw
	(1) Anchor Plate		(4) M5 Screw
	(1) Trolley Rod		(2) Washer
	(2) Wheel		(2) Wrench


## INSTALLATION STEPS:

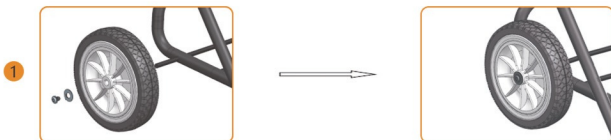

Use the end of a 4mm wrench to install each wheel with an M6 screw and washer.

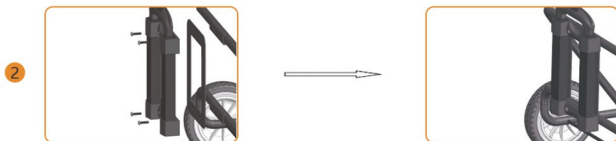

Use the end of a 3mm wrench to install the trolley rod and anchor plate to the frame with M5 screws.

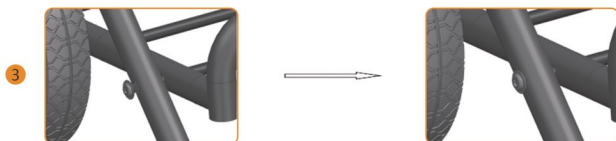

Use the end of a 4mm wrench to fasten the joint part of the frame with the remaining M6 screws.

 PROJECT SOLAR



[www.ProjectSolar.com](http://www.ProjectSolar.com)